



Original instructions

LOW ENERGY EVAPORATIVE COOLER

DiET3^D



natural cooling

Symphony[®]

www.symphonylimited.com

SAFETY INSTRUCTIONS

IMPORTANT!

- Carefully read the instructions before operating the unit
- This appliance is for indoor use only. Any outdoor use must be supervised and the unit must not be exposed to wet conditions such as rain.
- Rating: This unit must be only connected to a 220-240 V / 50 Hz earthed outlet.
- Installation must be in accordance with regulations of the country where the unit is used.
- If you are in any doubt about the suitability of your electrical supply have it checked and, if necessary, modified by a qualified electrician.
- This air cooler has been tested and is safe to use. However, as with any electrical appliance - use it with care.
- Disconnect the power from the appliance before changing filters, dismantling, assembling or cleaning.
- Avoid touching any moving parts within the appliance.
- Never insert fingers, pencils or any other objects through the guard
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities. It is also not intended for use by those with a lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Do not leave children unsupervised with this appliance.
- Do not clean the unit by spraying it or immersing it in water.
- Never connect the unit to an electrical outlet using an extension cord. If an outlet is not available, one should be installed by a qualified electrician.
- Never operate this appliance if the cord or plug is damaged. Ensure the power cord is not stretched or exposed to sharp objects / edges.
- A damaged supply cord should be replaced by the manufacturer or a qualified electrician in order to avoid a hazard.
- This appliance is designed for personal comfort and so should not be left unattended for extended periods.
- Any service other than regular cleaning or filter replacement should be performed by an authorised service representative. Failure to comply could result in a voided warranty.
- Do not use the appliance for any purpose other than its intended use.
- Never use the plug as a switch to start and turn off the air unit. Use the provided ON/OFF switch located on the control panel.
- Always place the unit on a dry and stable surface. Do not move or tilt the unit while the water tank is full.
- The appliance should not be installed in laundry or wet rooms.
- Do not use this unit in environments with flammable and explosive gases.
- Avoid keeping the unit in direct sunlight for a long period of time.

ENERGY SAVING AND UNIT SAFETY PROTECTION TIPS





- Do not cover or restrict the airflow from the outlet or inlet grills.
- For maximum performance the minimum distance from a wall or objects should be 50cm.
- Please make sure, while in operation, the water in the water tank does not exceed the MAX level and does not fall below MIN.
- Keep the filters clean. Under normal conditions, filters should only need cleaning once every three weeks (approximately). Since the filters remove airborne particles, more frequent cleaning may be necessary, depending on the air quality.
- In order to achieve maximum efficiency please place the unit near an open door or window. Evaporative Air Coolers work with an evaporative cooling mechanism which requires cross ventilation
- This unit will lose efficiency if the relative humidity in the room exceeds 60%
- The ambient operating temperature range is from 5°C to 40°C.
If used in low temperatures (as a humidifier) it is recommended to fill the water tank with warm (but not hot) water.

FEATURES

- Air Cooler, humidifier and air cleaner great in well ventilated large rooms and commercial spaces
- Alternative spot cooling solution for rooms and spaces which cannot be sealed or traditionally air conditioned
- 3 fan speeds and oscillation setting for improved air flow: low, medium and high speed allowing adjustment between maximum cooling and quiet operation
- Easy to use pop up touchscreen controls with magnetic remote control.
- Inverter motor for improved energy efficiency and quieter operation.
- Wheels for great mobility
- Large easy to fill tank

HOW EVAPORATIVE AIR COOLERS WORK

The air cooler cools the air by means of evaporation. When water evaporates into the air, the result is a mixture of air and water molecules. This chemical change requires heat which is taken from the water molecules, resulting in a spot cooling effect.

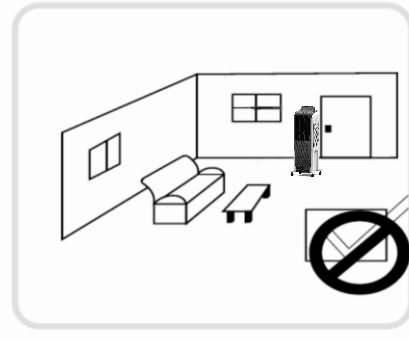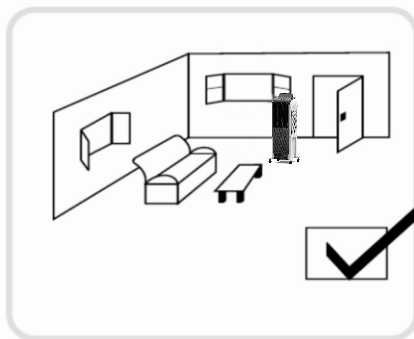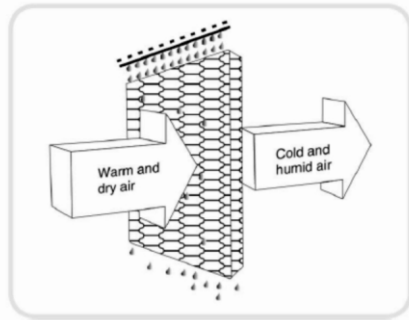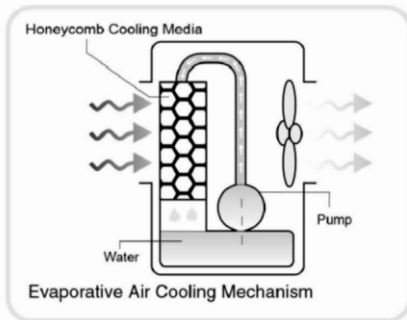

- The recommended relative humidity for optimum operation is 60% or lower. A drier climate makes for more noticeable cooling.
- The evaporative air cooler should not be used in enclosed or sealed spaces. It must be kept level and there must always be water in the water tank. Doors and windows should be open to allow free air flow. The evaporative air cooler works best when placed near an open window/air current.
- When the product is used for the first time the Honeycomb cooling media will have an odour, this should dissipate within a week of use.

DIAGRAM

The air cooler cools the air by means of evaporation. When water evaporates into the air, the result is a mixture of air and water molecules. This chemical change requires heat which is taken from the water molecules, resulting in a spot cooling effect.




INSTALLATION


This unit can easily be moved from one room to another. While moving the unit please note that it must always be kept upright and then placed on an even surface.


- Remove any packaging - keeping the air cooler in a vertical position.
- Make sure all parts are present and the unit is assembled correctly
- **WATER TANK:** Fill the water tank through the filling slot on the front of the unit with water or ice ensuring it does not to go above the MAX level.
- To prevent spillage, a container can be placed under the overflow outlet.
- Make sure that the honeycomb filter is properly inserted at the back of the unit.
- Connect the power plug to a working socket, and then press the power button.


CONTROL PANEL

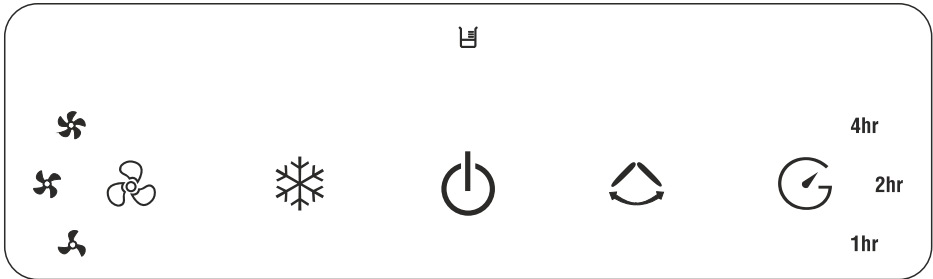



OPERATION

 Press to turn the air cooler On and Off


 Press to change the fan speed between low, medium and high. The currently selected fan speed will be illuminated.

 Press to activate the swing mode. The airflow will gently swing from left to right. The vertical direction of the airflow can be adjusted manually. The Swing symbol will be illuminated when the function is active. Press again to turn it off.

 WHILE THE UNIT IS RUNNING: Repeatedly press the timer button to select in how many hours the unit should turn off, upto a maximum of 7 hours. The duration of the timer is shown by the addition of the illuminated timer lights i.e. 2hr + 1hr = 3 hours.


 Press to activate the evaporative cooling. Ensure that the water level is sufficient for operation. When this function is not turned on the unit will operate as a fan / air purifier.

DISPLAY PANEL

 WATER TANK EMPTY
Refill the water tank before using cooling mode.

 LOW SPEED

 MEDIUM SPEED

 HIGH SPEED

REMOTE CONTROL

The remote control enables you to control all the same functions as the control panel from a distance of upto 6 metres. The remote control should be pointed towards the receiver on the front of the air cooler.

ATTENTION:

- Do not mix old and new or different types of batteries
- If not in use for a prolonged period the batteries should be removed.

Please note: Design of the remote may vary.

FILLING THE WATER TANK

Before turning on the cooling function, please add water to the tank. The appliance can be used without water in air cleaner mode, but the evaporative cooling mode must be turned off.



Before filling with water, open the water inlet on the front of the appliance, fill the water tank slowly and then return the water inlet into the original position. Only use clean tap water and do not fill the water beyond the maximum water level, as shown by the indicator on the side of the unit.

A container can be placed under the overflow outlet on the rear of the unit, to prevent damage to carpets / flooring due to overfilling.

Note: It is completely normal and in no way dangerous if the device has a slight odour or the water tank has slight discolouration when used for the first time.



MAINTENANCE

CLEANING

ATTENTION: Please turn off the appliance and disconnect from the mains before cleaning or performing any maintenance.

CLEANING THE SURFACE

- Clean the plastic housing with a duster or a soft wet cloth.
- Do not use chemical solvents (such as benzene, alcohol or gasoline) as they may cause irreversible damage.
- Make sure no water enters the control panel.

CLEANING THE WATER TANK

- Unplug the appliance
- Drain the water reservoir and refill with fresh water
- Doing this at least once a week will help reduce any mineral deposits and keep the filters clean.
- Do not run the unit in cooling mode with stale water in the tank.



MAINTAINING AND CHANGING THE HONEYCOMB FILTER PADS

The appliance is supplied with a set of 3 honeycomb cooling / filters pads (back and sides). The cleaning frequency for the honeycomb filters depend on local air and water conditions. In areas where the mineral content of the water is high (hard water), mineral deposits may build up on the honeycomb filter and restrict air flow. If mineral deposits remain on the honeycomb pads, the filter should be washed under fresh water. We recommend cleaning the honeycomb filter at least every two months, depending on your needs.

For best results, allow the honeycomb filter to dry after each use by turning off the cooling function for 15 minutes (with empty water tank) before turning the unit off.

END OF SEASON MAINTENANCE

1. Empty the tank and wash it.
2. Allow the tank to drain and clean the Honeycomb pads
3. Cover the unit and keep it in a dry place.

TROUBLESHOOTING


CLEANING

ATTENTION: Please turn off the appliance and disconnect from the mains before cleaning or performing any maintenance.

Issue	Possible Reason	Solution
No power	1 Power cord is not plugged in 2 No power from the socket. 3 The power button has not been pressed.	1 Connect the power cord 2 Check socket is switched on – test with a different appliance. 3 Press the power button
No dust elimination	1 The honeycomb filter is blocked. 2 The air inlet is blocked	1 Clean the honeycomb filter. 2 Remove the obstruction
Odour emission from unit	1 New unit. When the unit is used for the first time, the Honeycomb cooling media will have an odour, which will dissipate within a week of use 2. Honeycomb filter may have developed mold or bacterial growth	1 No action required 2 Clean the filter pads with mild antibacterial solution. Dry before use.

If the above solutions do not resolve the problem please contact the service centre

WIRING DIAGRAM

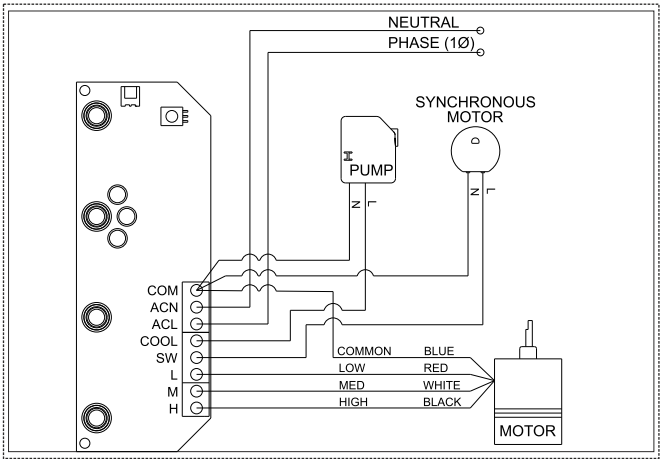

APPENDIX



Disposal: Do not dispose this product as unsorted waste. Collection of such waste must be handled separately as special treatment is necessary. Recycling facilities are now available for all customers at which you can deposit your old electrical products. Customers will be able to take any old electrical equipment to participating civic amenity sites run by their local councils. Please remember that this equipment will be further handled during the recycling process, so please be considerate when depositing your equipment. Please contact the local council for details of your local household waste recycling centres.

UK SUPPORT

Please, for your own convenience make these simple checks before calling the service line. If the unit still fails to operate, contact your dealer.

1. Is the unit plugged into the mains?
2. Is the fuse OK?
3. Switch the unit off and wait three minutes to see if the issue is resolved. Restart the unit.

WARRANTY REGISTRATION CARD

Product Sr. No.

Date of Purchase ____/____/____

Model : _____

Name : _____

Address : _____

E-mail : _____

Mobile : _____ Phone : _____

Condition of warranty

We extend this limited warranty to the original buyer (first retail purchaser) and warranty that the product shall be free from manufacturer defects in workmanship and materials for 12 months from the date of purchase. a. Warranty will come in with effect when the following conditions are met with a) Warranty registration card duly filled and received by the company within 10 days from the date of purchase. b) Product is operated following the recommendations explained inside the user manual. b. The company's liability under the warranty will be limited only to motor, pump, louver motor, remote, PCB and restricted to any such defect which occurs under conditions of normal operations and under proper use. Any part/s replaced by the company at its discretion shall be a functionally operative unit. c. This warranty shall not apply to product: 1) Which have not been purchased from authorized distributor through their network or company's authorized retail stores, 2) Which have been altered / opened by any other personnel not authorized by the company, 3) Incorrectly used in combination with any other substance or products, 4) Which are used for rental purpose and / or which develops problems due to faulty care or maintenance and alterations to product or its parts. 5) Which is subjected to electrical supply for which the product is not designed, 6) Warranty will void if the product is operated with a sub-standard inverter or non-sine wave inverter. 7) If documentation of buying is not available to validate an original purchase. d. While the company will make every effort to carry out the repairs at the earliest, it however is made expressly clear that the company is under no obligation to do so in a specified period. e. This warranty shall automatically terminate on expiry of the warranty period of 12 months from the date of purchase even if the product may not be used for any time during the warranty period for any reason whatsoever. f. Cooling pads and outer plastic parts are not covered under warranty. g. The company shall not be liable in any case for any loss or damage caused to any property, death or disability caused to any human life arising out of fire, electrical fault, short circuit, accidental handling or any kind of natural calamity. As, such the company's liability is limited to the cost of the spare parts of the said products only. h. Change of address of the customers must be intimated to the company without which the warranty shall not be operational. i. Due to ongoing research and development, the company holds the rights to modify the product without any prior notice or obligation to buyers. j. Purchaser should retain the purchase bill as evidence of the date of purchase. Copy of the purchase invoice should be given to the visiting service engineer while attending the complaint. In case of any alteration in the date of purchase invoice is found without sign and seal of the dealer, the warranty shall be void. k. During the warranty, customer is not entitled for exchange of product or refund money. l. The court/Consumer forums only at Ahmedabad, Gujarat, India shall have exclusive jurisdiction for any disputes arising out of this sale/transaction. m. Service for this product shall be provided by Authorized Service Provider. You may register warranty by log on to www.symphonylimited.com/warranty Warranty will be applicable if registered within 10 days of purchase. n. The above warranty conditions shall be applicable for domestic service only to the sales in the domestic markets of India, excluding north-eastern states, Andaman & Lakshadweep. For overseas market the warranty will be given by the local distributor of the respective country.

Company has four types of call registration facilities for customers.

1. Warranty registration through Website - visit www.symphonylimited.com/warranty-registration
2. Registration through Customer Care number – 9510976161
3. Registration through WhatsApp – 9510976161 only for customer.

Symphony Limited

Symphony House, FP12-TP50 Bodakdev,
Off SG Highway, Ahmedabad 380059, India.
E-mail : services@symphonylimited.com

Dealer's name
& signature

FOR SERVICE / WARRANTY REGISTRATION (INDIA)



symphonylimited.com/care



Call

OR



WhatsApp
'Hi' on

OR

9510976161

Scan



Symphony Limited

Symphony House, FP12-TP50 Bodakdev, Off SG Highway, Ahmedabad 380059, India.
E-mail : services@symphonylimited.com

natural cooling

Symphony®

www.symphonylimited.com