 


Before use of this product please read and preserve these important instructions.



## Control Panel



Duet i (Touch control panel)



Touch to turn the Cooling Fan On and Off



Touch to change the fan speed between high, medium and low.



 
Touch to activate the swing mode.



Touch to activate light On and Off




Touch to activate the cooling mode. Ensure that the water level is sufficient for operation.



Duet (Knob control panel)




 
Fan Control



Cooling & Swing Control

# **Wiring Diagrams**

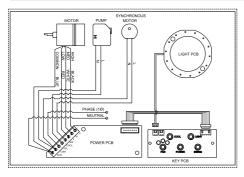

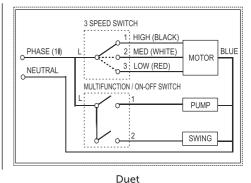

Duet i

## **Electrical Specification**

Product name	Watt / Amp (@ 220-240V/50Hz)
Duet i	60 / 0.30
Duet	60 / 0.30

## **Maintenance Tips**

- 1) Disconnect the power cord before servicing or maintenance.
- 2) Do not make loose wiring or use inferior material in servicing or maintenance to avoid fire hazard.
- 3) Please stop the device and contact the authorized service provider in case of electric shock from the cooling fan.
- 4) Please disconnect the power supply before opening any cover to avoid injury due to rotating part / electric shock
- 5) To clean the tank remove drain plug. Drain out all the residual water. Draining out the stagnant water regularly from tank is necessary to keep your environment hygienic.
- 6)To clean the cooling pad, please unplug the cooler; apply low water pressure with the help of the pipe on cooling pad from outside. Depending on the surrounding environment, clean the pad at least once or twice a year.
- 7) Under no circumstances, customer should open the Cooling Fan.
- 8) In case of any difficulties, please contact symphony customer care at 9510976161
- 9) Always use clean tap water.



#### Cleaning of cooling fan by draining the water

To drain the left over water from the tank, pull to remove the drain plug given at the lower back side of the tank. After draining, push to fix the drain plug properly.

It is advisable to drain water on regular basis for better performance  $\boldsymbol{\vartheta}$  longer life of pads

### **Trouble Shooting**

Trouble	Cause	Remedy
Less Cooling	Pump is switched OFF	Switch ON the pump
	No air circulation	Ensure cross ventilation
Water Leakage	Drain plug is displaced	Ensure that the drain plug is positioned properly
	Grill lock is disengaged	Relock the grill
	Cooling pad is sagged	Change the cooling pads
	Airflow switch is turned OFF	Switch ON the fan by selecting the required speed
	Loose contact at socket	Rectify faulty wiring / Socket in the house
	Switch or Motor Malfunction	Call symphony customer care help line

### Fill water



Ensure that the power is disconnected before adding water to the cooling fan. You can add water to the cooling fan by pulling the lid through the front inlet (As per the diagram). You may also add ice cubes for faster cooling. Water can be poured up to the highest point (or MAX) of the water level indicator. Always ensure that there is sufficient water in the tank, this will ensure the pump runs correctly and without damage.

## Warning

- 1. Unplug and disconnect the cooling fan from power source before attempting any maintenance, service or cleaning and filling water.
- 2. If the supply cord is damaged, it must be replaced by authorised service provider in order to avoid hazard. Do not operate the product with a damaged power cord or plug.
- 3. To avoid electric shock, connect only to an outlet provided with a ground fault circuit interrupting device. (ELCB = Earth leakage current breaker)

- 4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 5. Children of less than 3 years should be kept away unless continuously supervised.
- 6. Children aged 3 years and above shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged 3 years and above shall not plug in, regulate and clean the appliance or perform user maintenance
- 7. Children must not be allowed to play with cooler.
- 8. This appliance is not intended to be used in locations where special conditions prevail, such as the presence of a corrosive or explosive atmosphere (vapour or gas).
- 9.This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.



This marking indicates that this product should not be disposed off with other house hold wastes through out the EU and other applicable countries. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly. If you wish to discard this product please contact your local authorities or dealer from where it was purchased and ask for correct method of disposal.



Symphony cooler works on inverter. The inverter should be of sine-wave type of appropriate rating.



Cooling performance depends on temperature of water used relative humidity and ambient temperature  $\,$ 



# Symphony Limited

Symphony House, FP12-TP50 Bodakdev, Off SG Highway, Ahmedabad 380059, India. E-mail: services@symphonylimited.com

